 


Galant/Legnum 6A13 pinout EU-JDM

konektor	PIN kon	PIN	PIN schema SOHC-A/T JPN	schema SOHC-A/T JPN dvouřadý	PIN schema DOHC-A/T JPN VR-4	PIN EU 97	PIN EU 99	PIN EU 01	Popis pinu
A	1	1	1	1	1	1	1	1	1 Injector 1
A	2	2	24	2	2	2	2	24	24 Injector 3
A	3	3	10	3	3	3	3	10	10 Injector 5
A	4	4	14	4	4	4	4	14	14 Stepper motor coil A1
A	5	5	15	5	5	5	5	15	15 Stepper motor coil B1
A	6	N/A	N/A	N/A	N/A	6	6	6	6 EGR control selenoid
A	7	7	N/A	N/A	7	N/A	N/A	N/A	7 Tlakový regulační ventil paliva FRP selenoid
A	8	8	20	8	8	8	8	20	20 A/C relay Fuel pump relay
A	9	9							
A	10	10	11	10	10	10	10	11	11 Power tranzistor unit Zapalovací cívka č.1, č.4 (transistor) č.1
A	11	N/A	N/A		11	N/A	N/A		11 Zapalovací cívka č.3, č.6 (transistor)
A	12	12	41	12	12	12	12	59	59 Power supply
A	13	13		13	13	13	13	46	46 Ground
A	14	14	9	14	14	14	14	9	9 Injector 2
A	15	15	2	15	15	15	15	2	2 Injector 4
A	16	16	25	16	16	16	16	25	25 Injector 6
A	17	17	28	17	17	17	17	28	28 Stepper motor coil A2
A	18	18	29	18	18	18	18	19	19 Stepper motor coil B2
A	19	19	19	19	19	19	19	19	19 Air flow sensor reset signal
A	20	20							
A	21	21	18	21	21	21	21	18	18 Fan controller
A	22	22	21	22	22	22	22	21	21 Fuel pump relay
A	23	N/A	N/A		23	N/A	N/A		23 Zapalovací cívka č.2, č.5 (transistor)
A	24	N/A	N/A	N/A		24	24	16	16 Purge selenoid control
A	25	25	47	25	25	25	25	47	47 Power supply + ignition
A	26	26		26	26	26	26	58	58 Ground
B	1	31	N/A	31	31			31	31 Ventilation control selenoid /TLC /
B	2	32	N/A	32	32			30	30 Vacuum control selenoid /TLC/
B	3	33							
B	4	34							
B	5	35	N/A	35	35	N/A	N/A	N/A	35 A/C switch 2 (Fuel pump relay HI/Lo)
B	6	36	22	36	36	36	36	22	22 Engine warning lamp
B	7	37	52	37	37	37	37	54	54 Power steering presue switch
B	8	38	49	38	38	38	38	57	57 Control relay /Power supply/
B	9	39	N/A	N/A	N/A	N/A	N/A	3	3 Oxygen heating F/LH
B	10	40	N/A	N/A	N/A	N/A	N/A	4	4 Oxygen heating F/RH
B	11	41	N/A	N/A	N/A	N/A	N/A	26	26 Oxygen heating R/LH
B	12	42	N/A	N/A	N/A	N/A	N/A	27	27 Oxygen heating R/RH
B	13	43	N/A	N/A	43	N/A	N/A		43 Wastgare selenoid <T/C>
B	14	44							
B	15	45	83	45	45	45	45	83	83 A/C switch 1
B	16	46		46	46			86	86 Automacic trans ECU
C	1	51							
C	2	52							
C	3	53		53	53	53	53	81	81 TCL ECU
C	4	54	8	54	54	54	54	8	8 Alternator G terminal
C	5	55	54	55	55	55	55	52	52 Alternator FR terminal
C	6	56	84	56	56	56	56	84	84 Diagnostic pin 1 L-Line
C	7	57	N/A	57	57	57	57	65	65 A/C switch 2
C	8	58	N/A	N/A	58	N/A	N/A		58 Signál zapalování motoru <DOHC>
C	9	59		59	59	59	59	82	82 TCL ECU
C	10	60							
C	11	61	N/A	N/A	N/A	N/A	61	98	98 Imo ECU
C	12	62	85	62	62	62	62	85	85 Diagnostic pin 7 K-Line
D	1	71	58	71	71	71	71	68	68 Ignition switch - ST
D	2	72	64	72	72	72	72	62	62 Intake air temp sensor
D	3	73	N/A	N/A	N/A	N/A	N/A	74	74 Oxygen sensor rear
D	4	74	N/A	N/A	N/A	N/A	N/A	73	73 Oxygen sensor front
D	5	75	N/A	N/A	N/A	75	75	72	72 Oxygen sensor rear
D	6	76	71	76	76	76	76	71	71 Oxygen sensor front
D	7	77							
D	8	78	N/A	N/A	78	78	78	91	91 Detonation sensor
D	9	79	100	79	79	79	79	100	100 Diagnostic pin 12 reflashing
D	10	80	66	80	80	80	80	60	60 Backup power supply
D	11	81	46	81	81	81	81	42	42 Sensor impressed voltage
D	12	82	98	82	82	82	82	99	99 Ignition swit - IG
D	13	83	44	83	83	83	83	44	44 Engine coolant temp sensor
D	14	84	78	84	84	84	84	78	78 Throttle position sensor
D	15	85	N/A	N/A	85	85	85	51	51 barometric presue sensor
D	16	86	80	86	86	86	86	80	80 vehicle speed sensor
D	17	87	79	87	87	87	87	79	79 Idle position switch
D	18	88	56	88	88	88	88	50	50 Top dead centre sensor
D	19	89	45	89	89	89	89	43	43 Crank angle sensor
D	20	90	65	90	90	90	90	61	61 Air flow sensor
D	21	91	59	91	91	91	91	67	67 Inhibitor switch A/T
D	22	92	92	92	92	92	92	49	49 Engine coolant temp sensor ground

JDM ECU pin out


<SOHC-A/T>



<除 SOHC-A/T>




6A13 DOHC

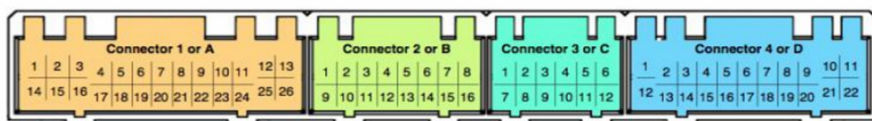


6A13 SOHC EU 2001

 (C-166) (MU803783)



(C-167) (MU803782)

 

(C-168) (MU803784)

